

# VIBROSIGHT INSTALLATION AND LICENSING

---

## 1. Software download

You can find all released version of VibroSight on the FTP server:

<https://ftp.mss.mymeggitt.com>

Log in using your own credentials or the generic ones below:

**Login ID:** vibrosight

**Password:** Gf45H32hg1GY

**Please refer to Annex 1 for the detailed installation guide**

## 2. Generating a registration file

Once installed, VibroSight software operates in a fully-functional demonstration mode for up to 30 days. However, the Parker Meggitt (Meggitt SA) software license agreement should be activated as soon as possible in order to avoid being limited to the evaluation period and to have full access to Parker Meggitt customer support.


**The VibroSight software activation process steps are:**

1. Installing the VibroSight software (see annex 1).
2. Generating a registration file:


The information necessary to generate a license key for the VibroSight software requires some information about the computer on which the software has been installed.

The required registration (.xsi system information) file is automatically generated by the VibroSight software. The information captured is specific to the computer on which the software is installed. Typically, this includes the MAC address, BIOS serial number and motherboard serial number.

Start VibroSight Vision. Running in demonstration mode, the VibroSight software will always show a VibroSight Software Licensing dialog box that indicates how many of the evaluation days have been used.

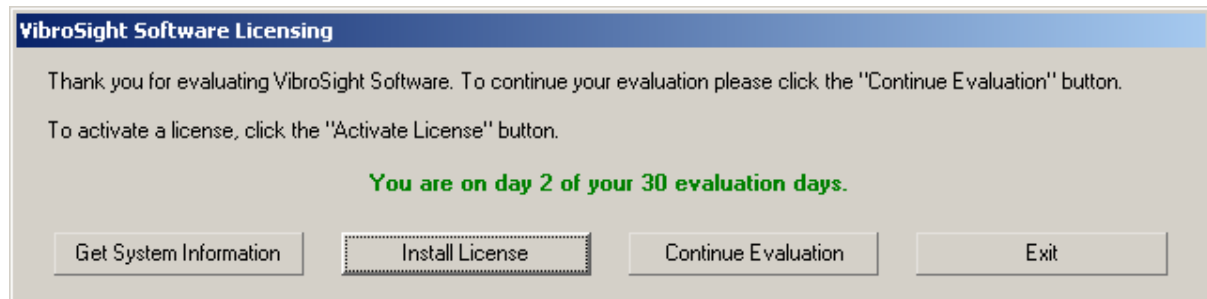

Click the Get System Information button. The System information dialog box appears

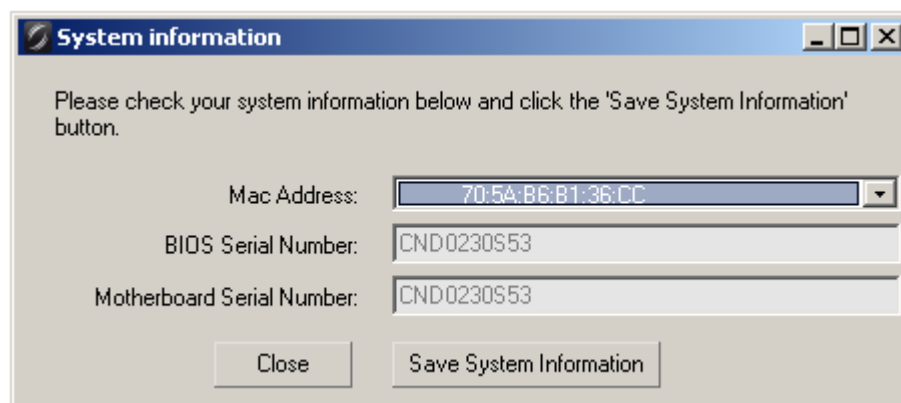

Click the Save System Information button and use the resultant Save As dialog box to indicate in which folder and under what name the information should be saved.

3. The registration key must be uploaded in our portal <https://vibro-meter.atlassian.net/servicedesk/customer/portal/2/user/login>

Make sure the request is made under "Licensing" section

4. Meggitt Customer support will generate the required license key and will send the .lic file to the user via email for activation.
5. Installing a license key file.

Start VibroSight Vision. Running in demonstration mode, the VibroSight software will always show a VibroSight Software Licensing dialog box that indicates how many of the evaluation days have been used. Then click on the **"Install License"** button and select the license key file (xxx.lic) provided by Parker Meggitt customer support.

The license is now active.